

### 03.103 CDRA Zeolite Filter Regeneration

(03. HSS)

#### NOTE

Starting MD16, when this procedure calls for you to request authorization from MCC for an action, you may proceed on your own go.

#### OBJECTIVE:

To remove trapped CO<sub>2</sub> and H<sub>2</sub>O from saturated Zeolite filters for recycle and reuse.

#### EQUIPMENT:

Zeolite 5A filter (will be gathered during the procedure)  
Zeolite 13X filter (will be gathered during the procedure)  
Zeolite regeneration unit (will be gathered during the procedure)  
PPE safety glasses  
PPE Kobalt work gloves  
PPE static wrist tether  
Timer

#### REFERENCE

Serial Number Tracking Sheet


#### NOTE

The CO<sub>2</sub> and H<sub>2</sub>O from the Zeolite filters will be added to the reactants and products respectively for the Sabatier process as a means to create a closed-loop cycle for cabin air on POLARIS.

GMWS

#### 1. PUT SABATIER IN STANDBY MODE

- 1.1 Don PPE safety glasses.
- 1.2 Don PPE Kobalt gloves.

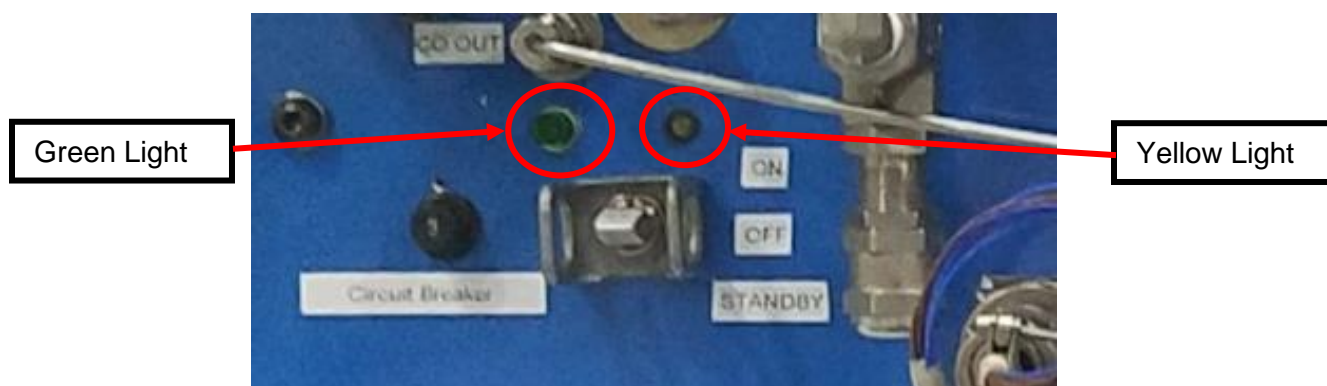


**Figure 1:** Sabatier Panel

- 1.3 On the Sabatier Panel, move the power switch to “STANDBY” (see Figure 1).
- 1.4 Confirm yellow light blinks indicating Sabatier is in Standby mode (see Figure 1).

### 03.103 CDRA Zeolite Filter Regeneration (03. HSS)

#### GMWS 2. ASSEMBLE ZEOLITE REGENERATION UNIT TO SABATIER

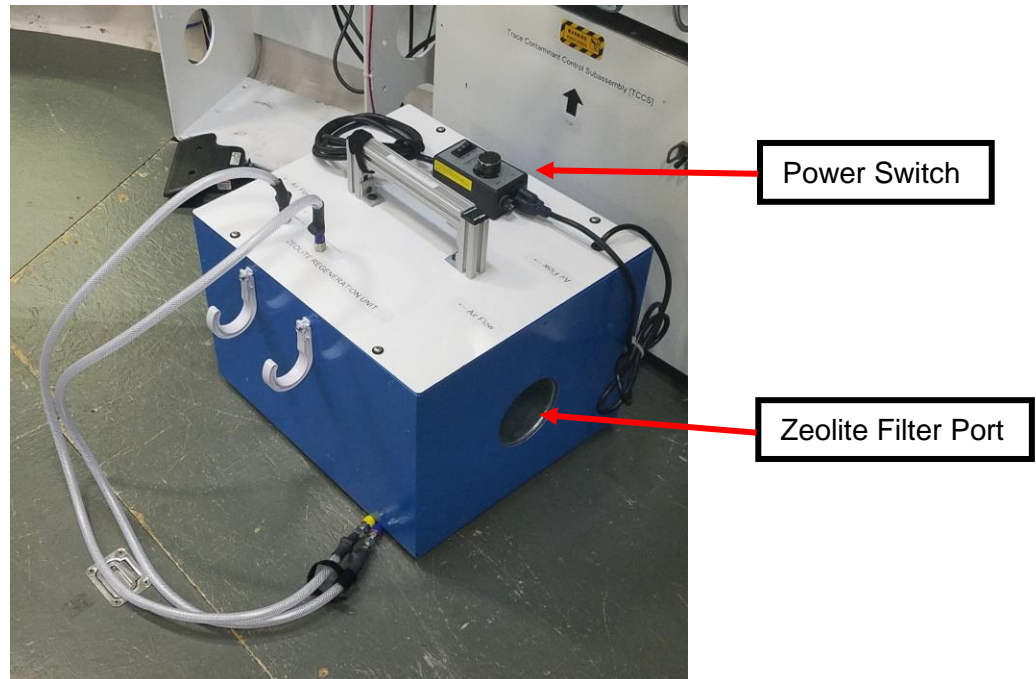

**Figure 2:** Zeolite Regeneration Unit (ZRU)


- 2.1 Move Zeolite Regeneration Unit (ZRU) in front of Sabatier (see Figure 2).
- 2.2 Don static wrist tether and attach to unpainted metallic surface.
- 2.3 Unfurl the CO<sub>2</sub> (yellow taped) and H<sub>2</sub>O (blue taped) hoses and quick disconnects (QDs).
- 2.4 Connect yellow QD to yellow port on Sabatier.
- 2.5 Confirm the yellow QD fully snaps into place by audible click sound and giving the hose a slight tug.
- 2.6 Connect blue QD to blue port on Sabatier.
- 2.7 Confirm the blue QD fully snaps into place by audible click sound and giving the hose a slight tug.

### 03.103 CDRA Zeolite Filter Regeneration (03. HSS)



**Figure 3: ZRU Power Switch**

- 2.8 Confirm power switch on ZRU is in the “OFF” position (see Figure 3).
- 2.9 Unfurl power cable and plug power cable into outlet strip on right of Sabatier (see Figure 4).
- 2.10 Detach static wrist tether from metallic surface.

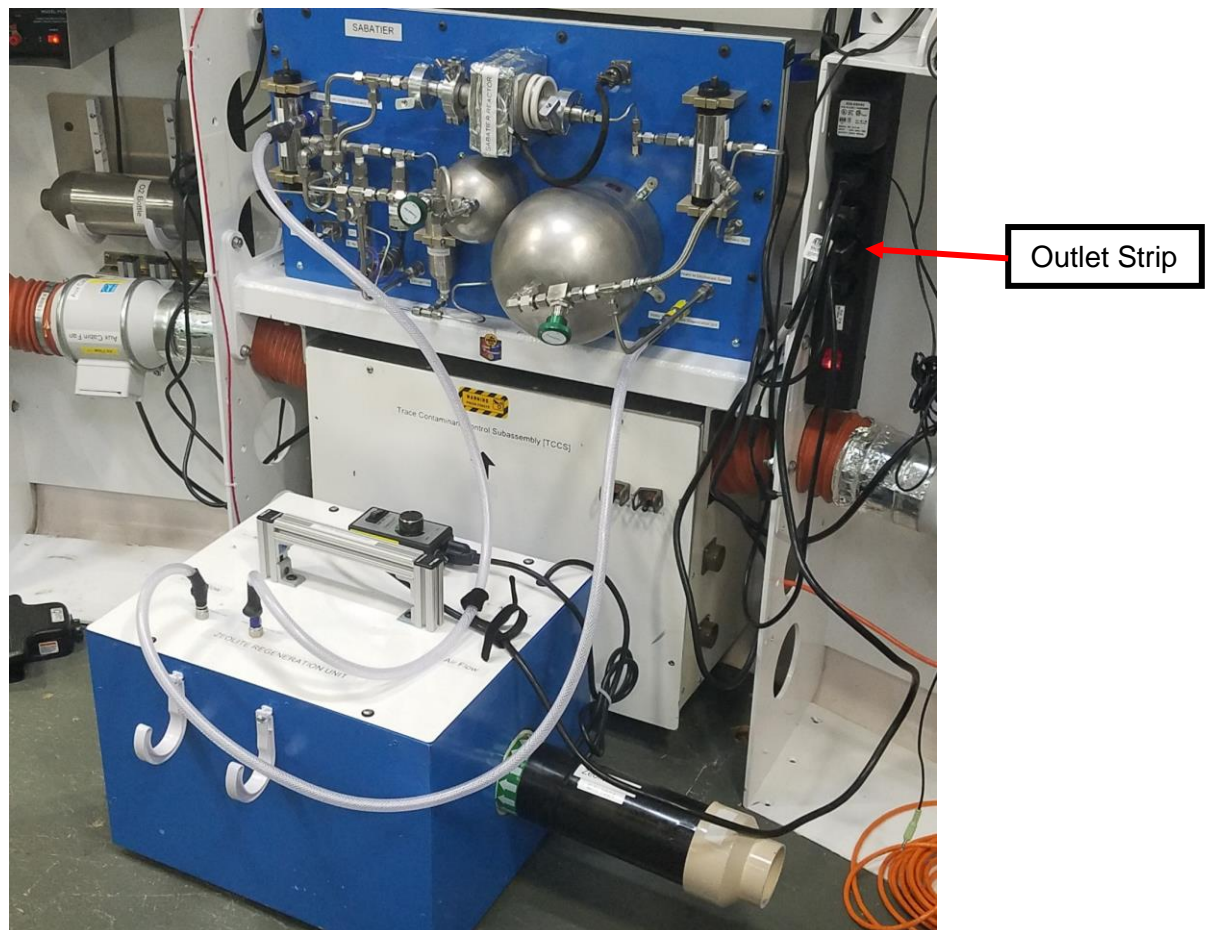


**Figure 4: ZRU Connected to Sabatier**

### 03.103 CDRA Zeolite Filter Regeneration (03. HSS)

ALC

#### 3. RETRIEVE SATURATED ZEOLITE 5A AND 13X FILTERS

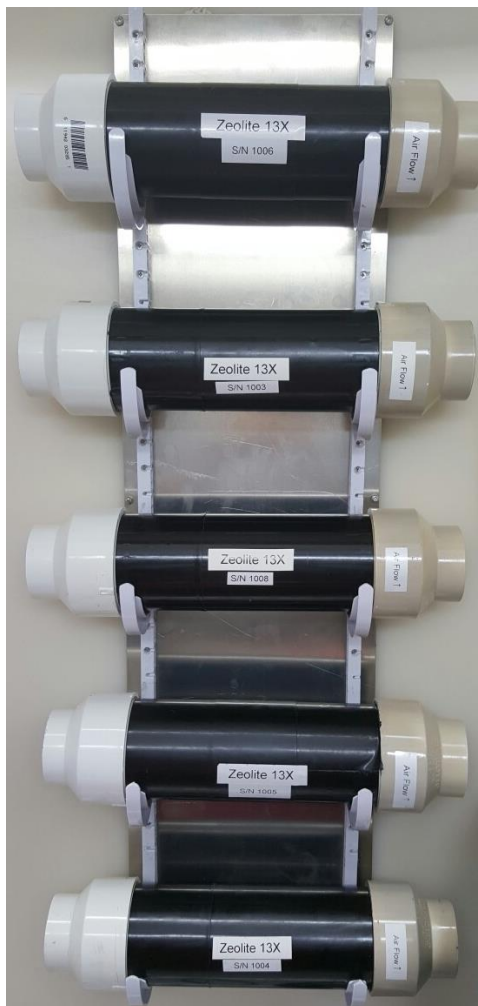

**Figure 5: Zeolite Canister Rack**

3.1 Refer to Serial Number Tracking sheet and remove one saturated Zeolite 5A filter from rack or consumables drawer in ALC L01.

3.1.1 Remove one saturated Zeolite 13X filter from rack or consumable drawer in ALC L01.

GMWS

#### 4. INSERT SATURATED ZEOLITE 5A AND 13X FILTERS INTO ZRU

4.1 Attach static wrist tether to unpainted metallic surface.

4.2 Temp stow Zeolite 13X filter.

4.3 Insert Zeolite 5A filter into ZRU port (see Figure 2 and Figure 4).

4.4 Confirm air flow arrows on Zeolite 5A filter are correct.

### 03.103 CDRA Zeolite Filter Regeneration

(03. HSS)

- 4.5 Power on ZRU to "FULL" power (see Figure 3).
- 4.6 Detach static wrist tether from metallic surface.
- 4.7 Notify MCC of ZRU power on.
- 4.8 Set timer for 20 minutes to ensure ZRU removes all adsorbed CO<sub>2</sub> and H<sub>2</sub>O.
- 4.9 Attach static wrist tether to unpainted metallic surface.
- 4.10 Power off ZRU (see Figure 3).
- 4.11 Swap Zeolite 5A filter with Zeolite 13X filter.
- 4.12 Confirm air flow arrows on Zeolite 13X filter are correct.
- 4.13 Temp stow Zeolite 5A filter.
- 4.14 Power on ZRU to "FULL" power (see Figure 3).
- 4.15 Detach static wrist tether from metallic surface.
- 4.16 Notify MCC of ZRU power on.
- 4.17 Wait 20 minutes to ensure ZRU removes all adsorbed CO<sub>2</sub> and H<sub>2</sub>O.
- 4.18 Attach static wrist tether to unpainted metallic surface.
- 4.19 Power off ZRU (see Figure 3).
- 4.20 Remove ZRU power cable plug from outlet strip to right of Sabatier.
- 4.21 Furl power cord and use Velcro tie to secure.
- 4.22 Disconnect blue QD from Sabatier.
- 4.23 Disconnect yellow QD from Sabatier.
- 4.24 Furl hoses and QDs together around stow hooks and use Velcro tie to secure.
- 4.25 Remove Zeolite 13X filter from ZRU.
- 4.26 Doff static wrist tether.

#### ALC 5. RETURN RECYCLED ZEOLITE FILTERS TO AIRLOCK

- 5.1 Attach recycled Zeolite 5A filter to Zeolite Rack located on Airlock Module Wall C.
- 5.2 Attach recycled Zeolite 13X filter to Zeolite Rack located on Airlock Module Wall C.

#### GMWS 6. RETURN SABATIER TO ON CONFIGURATION

### **03.103 CDRA Zeolite Filter Regeneration**

(03. HSS)

- 6.1 Switch Sabatier to “ON” (see Figure 1).
- 6.2 Confirm green light illuminates indicating Sabatier is in On mode.
- 6.3 Doff all PPE and stow.